


Mr. Flame™ Wire Screen Mesh Installation Instructions

(Install Mesh Kit prior to door installation)

1. Lay glass door on a flat surface with back side up. (Use a blanket to protect the glass)
2. Gently pull back fiberglass at top center, inside of door.
3. Locate and loosen center bolt. (Bottom side of top trim at center) Do not take bolt out completely.
4. Locate “U” shaped groove on center bracket, slide groove under bolt and tighten.
5. Slide 1 mesh curtain onto each bar.
6. Locate side bar holes. (Level with center bracket)
7. Place small round end of mesh bars into each hole.
8. Slide 1st ring of each mesh curtain towards outside bar holes. (This keeps mesh from bunching in the middle of the fireplace opening)
9. Attach eye of mesh bar (right side), flat side up, to bottom of center bracket using wrench provided. Repeat with left side. (Bars will over lap each other)
10. Install door to fireplace per instructions provided.

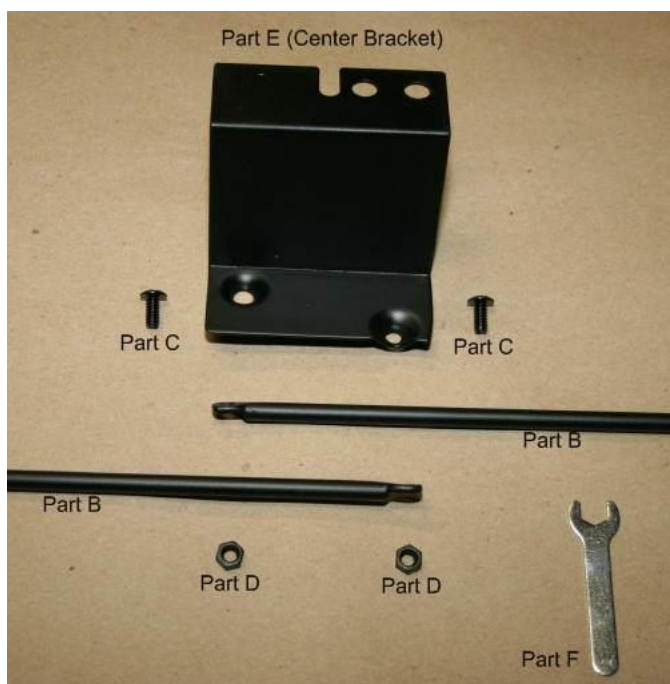

Parts List

- Part A (2) Mesh Curtains (Not shown)
- Part B (2) Curtain Rods
- Part C (2) Screws
- Part D (2) Nuts
- Part E (1) Center Bracket
- Part F (1) Disposable Wrench

www.FireplaceDoorStore.com
GO Sales Inc.
3334 SE Teal Dr.
Gresham, OR 97080
1-877-663-7454