


# Mr. Flame Fireplace Flares and Wire Screen Mesh Installation Instructions

*(Install Flares and Mesh Kit prior to door installation)*

- Step 1) Lay glass door, front side down, on a clean flat surface, so that you have access to the back of the door. Be sure to protect glass by laying it on a blanket or soft surface.
- Step 2) Remove the (2) screws (part G) and “L” bracket (part H) from each flare. Flip flares over and lay carefully on each side of the glass door. They will be reattached to the same holes that they were removed from.
- Step 3) Place one flare on side of glass door and line up the holes. Replace “L” bracket over hole at top of door and screw into place with the larger hole of the “L” bracket facing towards the side of the glass door. Screw flare down at bottom of door. Repeat process with opposite side flare.
- Step 4) Gently pull back fiberglass at top center, inside of door. Locate and loosen center bolt. (Bottom side of top trim at center). Do not take bolt out completely.
- Step 5) Locate “U” shaped groove on center bracket (part E), slide groove under bolt and tighten.
- Step 6) Slide 1 mesh curtain onto each curtain rod. Do not loop last ring onto end of bar (small round end).
- Step 7) Place small round end of curtain rods through holes of “L” brackets on each side of door.
- Step 8) Slide the last ring (left un-looped) of each mesh curtain over end of curtain rod. (This keeps mesh from bunching in the middle of the fireplace opening.)
- Step 9) Attach eye of curtain rods, flat side up, to bottom of center bracket using wrench. Bars will overlap each other.

**The Mr. Flames Flares and Wire Screen Mesh are now properly installed. Install door to fireplace per instructions provided.**

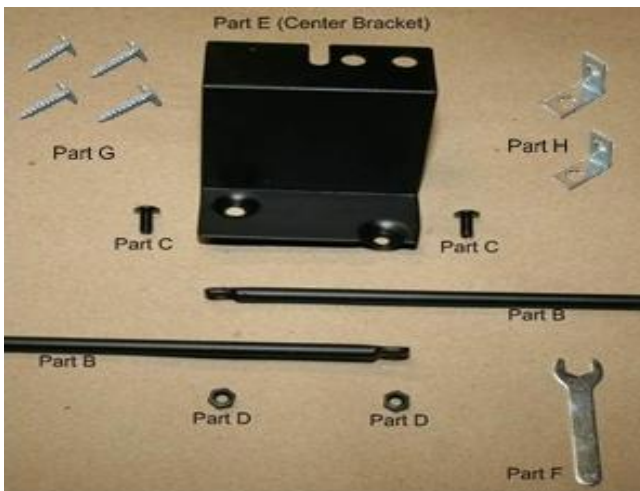

## Parts List

- Part A (2) Mesh Curtains (Not shown)
- Part B (2) Curtain Rods
- Part C (2) Screws (black)
- Part D (2) Nuts
- Part E (1) Center Bracket
- Part F (1) Disposable Wrench
- Part G (4) Screws (silver)
- Part H (2) “L” Bracket

[www.FireplaceDoorStore.com](http://www.FireplaceDoorStore.com)

**GO Sales Inc.**

**3334 SE Teal Dr.**

**Gresham, OR 97080**

**1-877-663-7454**

